


## **K12 SYSTEM LIFT UP**







### **BRACKET Ø15 INSTALLATION**

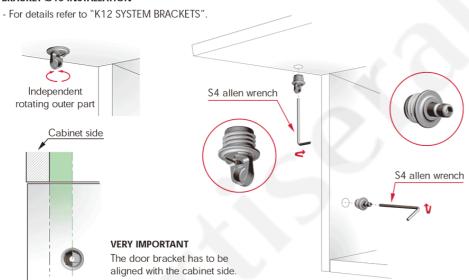





#### SCREW FIXING BRACKETS INSTALLATION

- For details refer to "K12 SYSTEM BRACKETS".













## K12 SYSTEM ADJ LIFT UP






Certificates available on request.



### INSTALLATION

- For details refer to "K12 SYSTEM ADJ BRACKETS".

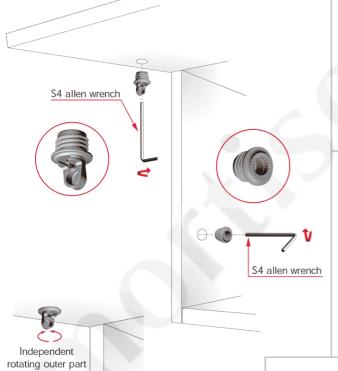






LOCKING: Rotate the plastic knob.









ОК

#### **VERY IMPORTANT**

The door bracket has to be aligned with the cabinet side.




**ADJUSTMENT** 








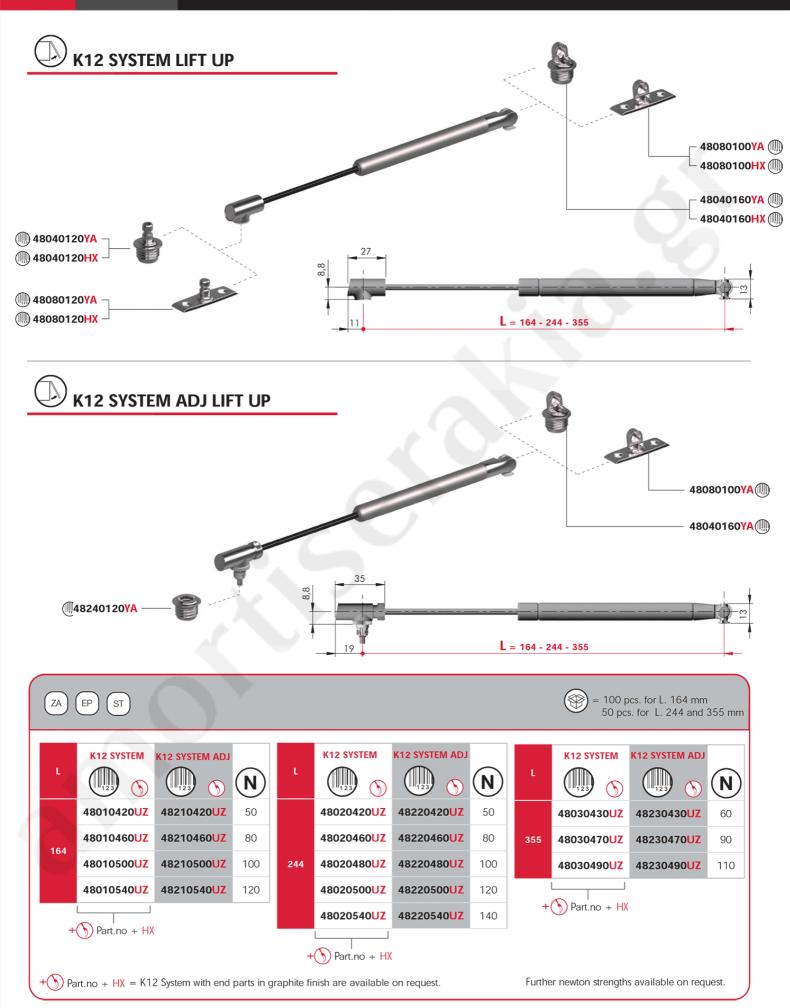





## Number of stays chart - L 164 mm



Rev. 02

h	Door weight (Kg)															
"	1 1,5	2	2,5	3	3,5	4	4,5	5	5,5	6	6,5	7	7,5	8	8,5	
200 - 224	2x50N	1	2x8	ON	2	x100	N	2x12	20N	3x1	20N	4x10	NOC	4x120N		
225 - 274	2x50N	1	2x8	ON	2	x100	N	2x12	20N	3x1	20N	4x10	NOC	4x120N		
275 - 300	2x50N	2x8	ON	2x1	00N	2x1:	20N	3x10	NOC	3x1:	20N	4x10	NOC	4x120N		

## Number of stays chart - L 244 mm



Rev. 02

												Doo	r we	ight (	(Kg)	The same										
h	1	1,5	2	2,5	3	3,5	4	4,5	5	5,5	6	6,5	7	7,5		8,5	9	9,5	10	10,5	11	11,5	12	12,5	13 1	3,5
290 - 324	1x 50N	1x8	BON	2x5	ON			2	2x80N	٧			2x10	NOC	2x12		N	2x140N		2x160N*		1*	* 2x180		*	
325 - 374	1x 50N	1x 80N	2x5	ON			2x80N				2x10	NOC	2	x120N		2x140N		2x160N*			2x18			ON*		
375 - 424	1x 50N	1x 80N	2x5	ON		2x8	ON		2x1	00N	2	x120	N	2x14	10N	2x160N*		ķ			2x18	30N*				3x 40N
425 - 474	1x 50N	2	2x501	٧		2x80N 2x100				00N	N 2x120			N 2x14		2x160N			2x	x180N*			3x160N*			3x* 80N
475 - 500	1x 50N						2x100N					N	2x140N		2x16	2x160N*		2x180N*		3x160			N*		3x 180N	

<sup>\*</sup> Strenghts available on request.

## Number of stays chart - L 355 mm



Rev. 02

h	Door weight (Kg)																								
	1 1,5	2	2,5	3	3,5	4	4,5	5	5,5	6	6,5	7	7,5	8	8,5	9	9,5	10	10,5	11	11,5	12	12,5	13	13,5
390 - 424	1x60N	1	1x9	90N 2x6				I			2	2x90N				2x110N									
425 - 474	1x60N	1x90	ON		2	x601	N			2x90N			2x110N						3x9	90N			3	N	
475 - 524	1x60N	1x90	ON		2x6	ON			2x9	90N			2x110N					3x <sup>4</sup>	90N			3x110N		ON 4x90	
525 - 574	1x60N	1x90	ON	2x6	2x60N 2x9			ON		2x110N			3x90N			3x110N				4x			x90N		4x 110N
575 - 600	1x90N	2x6	ON	2	2x90N 2			k110	N			3x9	90N			3x110N			4x90N				4x110		





## LIFT UP DRILLING PLANS WITH STANDARD HINGES **OPENING WITH HANDLE**



















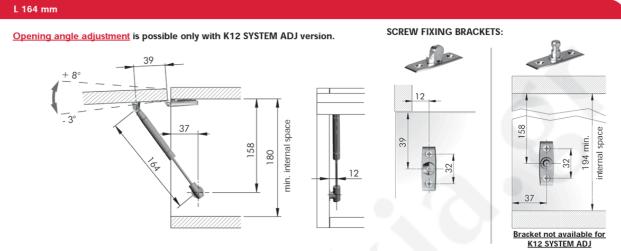

## Opening angle adjustment is possible only with K12 SYSTEM ADJ version.

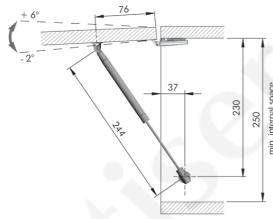

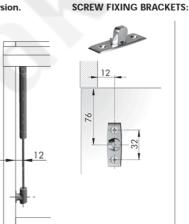

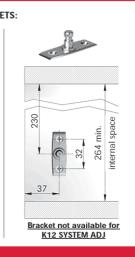


#### L 355 mm

L 244 mm

# internal space 37

Opening angle adjustment is possible only with K12 SYSTEM ADJ version.

## SCREW FIXING BRACKETS:

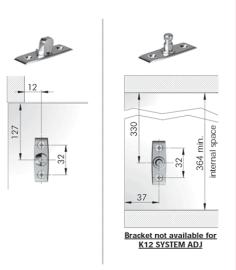

The dimensions of the above drilling plans refer to carcases which use standard sprung or unsprung hinges and mounting plates 0 mm. Please note that the opening angle varies with respect to the hinge brand and adjustment carried out.









OPENING SYSTEMS FOR FLAP AND DROP DOWN DOORS





# LIFT UP DRILLING PLANS WITH STANDARD HINGES PUSH TO OPEN


















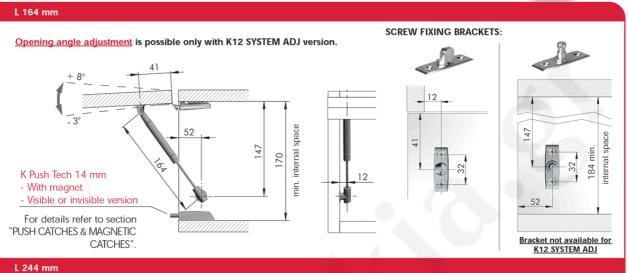

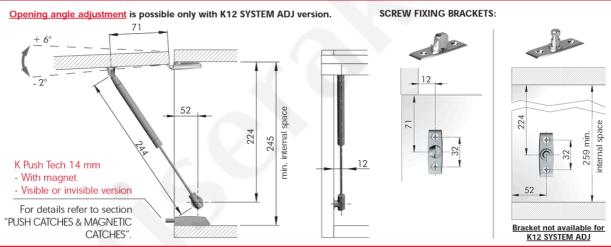

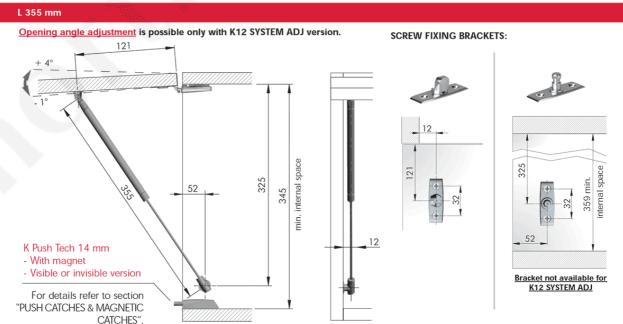

The dimensions of the above drilling plan refer to carcases which use standard unsprung hinges and mounting plates 0 mm. Please note that the opening angle varies with respect to the hinge brand and adjustment carried out.



